



For 5000, 7000, and 9000 series only

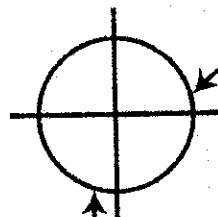

Center punch and drill $\frac{13}{16}$ " diameter hole in fender normal to the fender surface

For 3000 series only

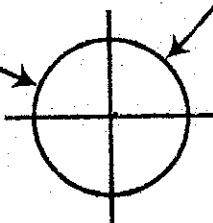

For 4000, 6000, 8000, and 10000 series only

Line up with cowl edge (3000, 4000, 6000, 8000, and 10000 series only)

